 
 




←UP/DN→



SPARE :- 37.38.39.40.45 - 49.

SL. NO.	CRANK HANDLE	CONTROL POINTS
1.	CH1	31A/B. 33A/B.
2.	CH2	41A/B. 42A/B.
3.	CH3	35A/B. 36A/B.
4.	CH4	32A/B. 34A/B.
5	CH5	43A/B. 44A/B.

NOTE :- IBS IS PROVIDED BETWEEN BARPALI -- DUNGRI PALI SECTION ON BOTH UP AND DN LINE.

